

TakeDown Ulrich: Disassembly and Assembly

CAUTION:

Please observe the safety rules when handling firearms and read the operating instructions carefully before using the rifle – see manual Blaser R 93, pages 2/3.

Disassembly of the Take Down Ulrich

CAUTION:

Please ensure that the rifle is unloaded, before disassembling it!

- Take out the bolt assembly of the rifle (Image A), see manual Blaser R 93, page 4, chapter 1.2.
- Push the release button on the fore-end slightly up to the stop (Image B), then keep it pushed and at the same time rotate the barrel and the fore-end by a clockwise rotation of 1/8. Now you can release the button. (Image C)
- Pull the barrel and fore-end off (Image D).




Assembly of the Take Down Ulrich

CAUTION:

Please ensure that the rifle is unloaded, before assembling it!

- Push the barrel and fore-end clockwise together by a rotation of 1/8.
- By doing so, impose moderate pressure, as the locking mechanism is under spring pressure.
- Rotate the barrel and the forearm anti-clockwise into the correct position, until it catches hearably.

TakeDown Ulrich: Regulating the contact pressure of the Take Down locking mechanism

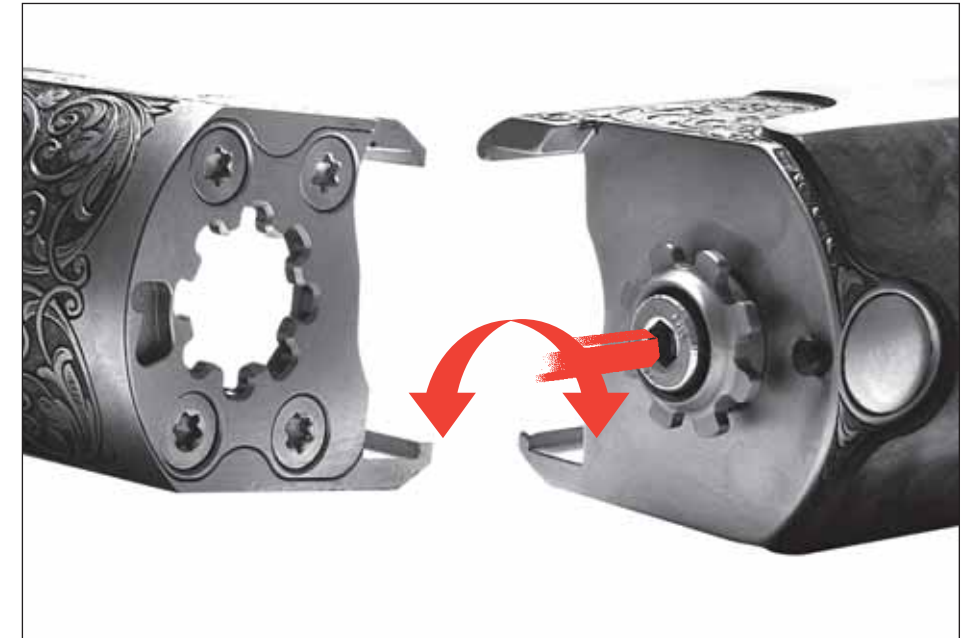

Increasing the contact pressure

- The locking mechanism is spring bedded
- By rotating the cylinder head screw clockwise, the contact pressure of action and barrel is increased.

IMPORTANT:

The contact pressure is adjusted optimally when it corresponds to the resistance which you need to push the R 93 cocking slide forward.

Reducing the contact pressure

- By rotating the cylinder head screw anti-clockwise, the contact pressure of action and barrel is reduced.

R 93 OPERATING INSTRUCTIONS

Please read the operating instructions of the Blaser R 93 manual, which is available at: www.blaser.de